


Changing a "part" name

This thread will show how to change the name of a part that is in the assembly.

- Step 1) Select the "Part Details" tab
- Step 2) Select the part from the list
- Step 3) Click on the part name in the lower box
- Step 4) Key in the new part name

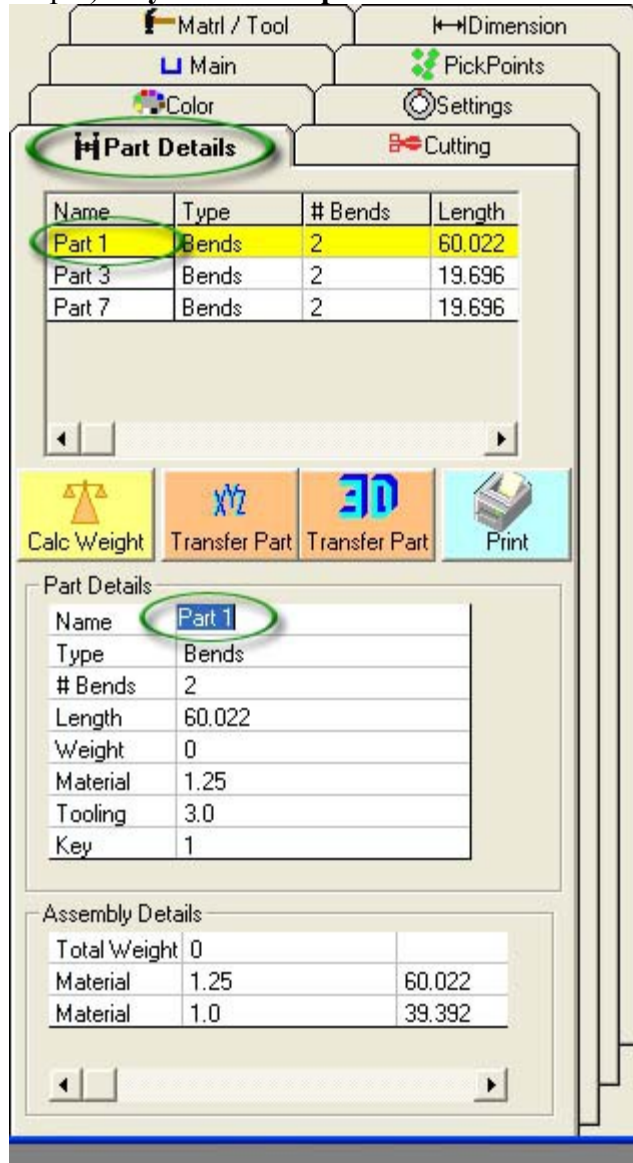

Notice the part name is now changed in the selection list:

Matl / Tool Dimension

Main PickPoints

Color Settings

Part Details Cutting

Name	Type	# Bends	Length
Main Rail	Bends	2	60.022
Part 3	Bends	2	19.696
Part 7	Bends	2	19.696

Calc Weight Transfer Part 3D Print

Part Details

Name	Main Rail
Type	Bends
# Bends	2
Length	60.022
Weight	0
Material	1.25
Tooling	3.0
Key	1

Assembly Details

Total Weight	0	
Material	1.25	60.022
Material	1.0	39.392