


Changing the current Material & Tooling

This thread is to show how to change the tooling and material for parts that are going to be created in the assembly. A different thread covers "changing" the material or tooling.

Select the "Main" tab. Select the "Defaults" command button:

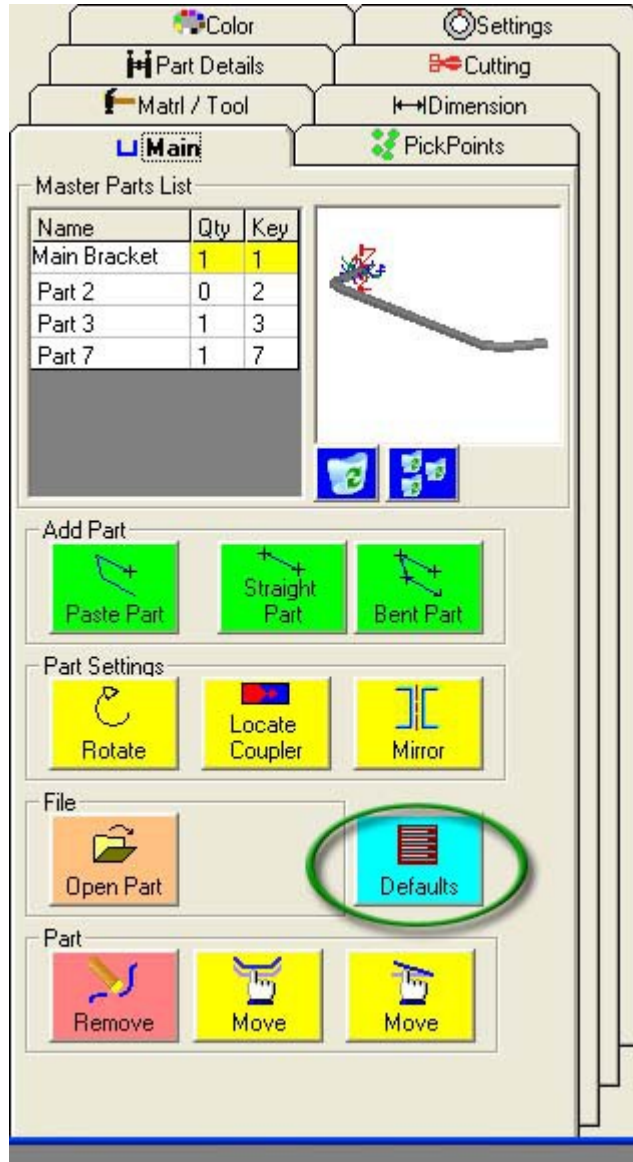

Select the down arrow on the right side of the white combo box. Select the tooling or material you desire. Select the "Apply" command button.

The image shows a software dialog box with a light blue background. It is divided into three horizontal sections. The top section is labeled 'Material' and contains a dropdown menu with the value '1.0'. The middle section is labeled 'Tooling' and contains a dropdown menu with the value '3.0'. The bottom section is labeled 'Color' and contains a button labeled 'Change Color'. At the very bottom of the dialog box are two buttons: 'Cancel' and 'Apply'.

NOTE: If your default material and/or tooling has been set in the "Options" window (under the "tools" pull-down), assembly will start by using those values.