


Changing the Material or Tooling of a part

This thread is to show you how to change the material or tooling of a part in your assembly.

Select the "Matrl / Tool" tab. Select the material or tooling cell you desire to change:

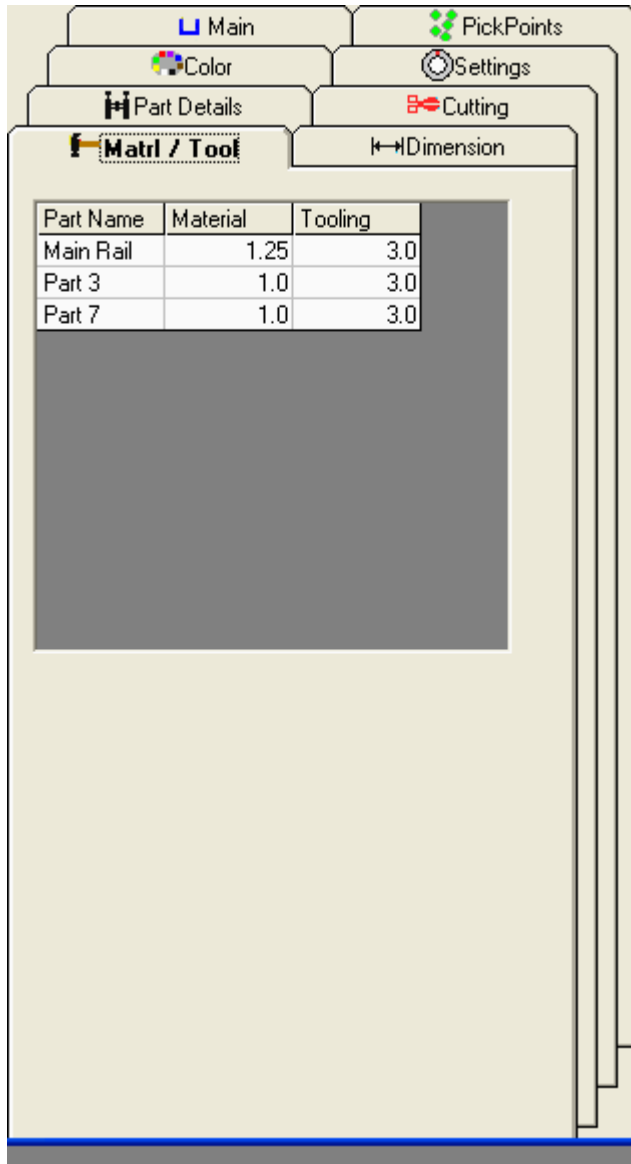

When you select one of the cells the tooling / material change window will appear:

Material

1.0

Tooling

3.0

Color

Change Color

Cancel Apply

NOTE: You must change the material or tooling, one part at a time.