


Changing the text of a dimension

Changing the text of a dimension.


This feature allows for the text of a dimension to be changed. Please NOTE: This does not allow the text to go back and update the part model.

Select the command button "**Change Dim Value**"

Select the "**PickPoint**" of the text to change.

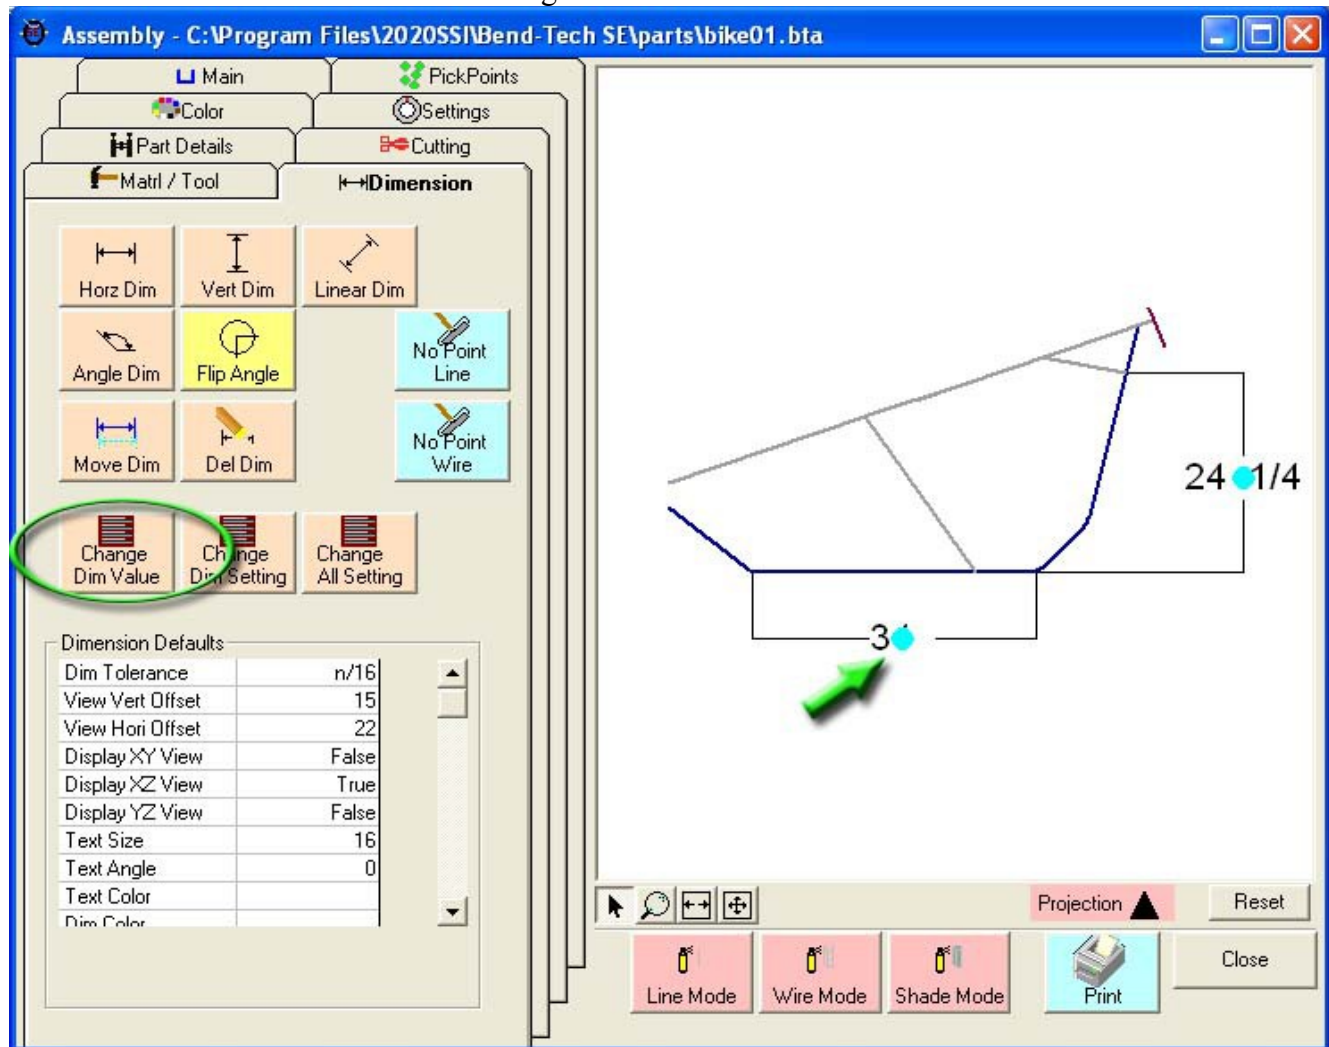

Type in the new text that is desired.

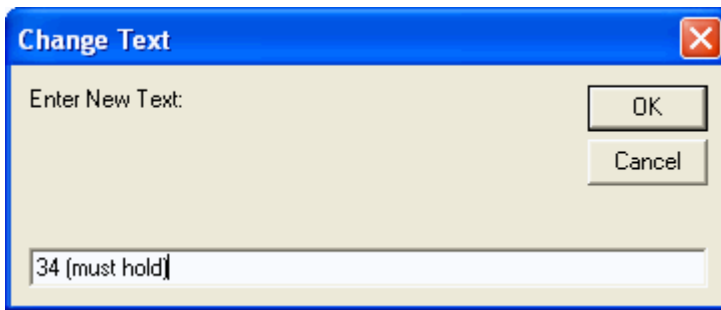

The text will be updated:

