


Moving a dimension

Moving a dimension

Select the "**Move Dim**" command button.

Select the "**PickPoint**" that represents the dimension to move.

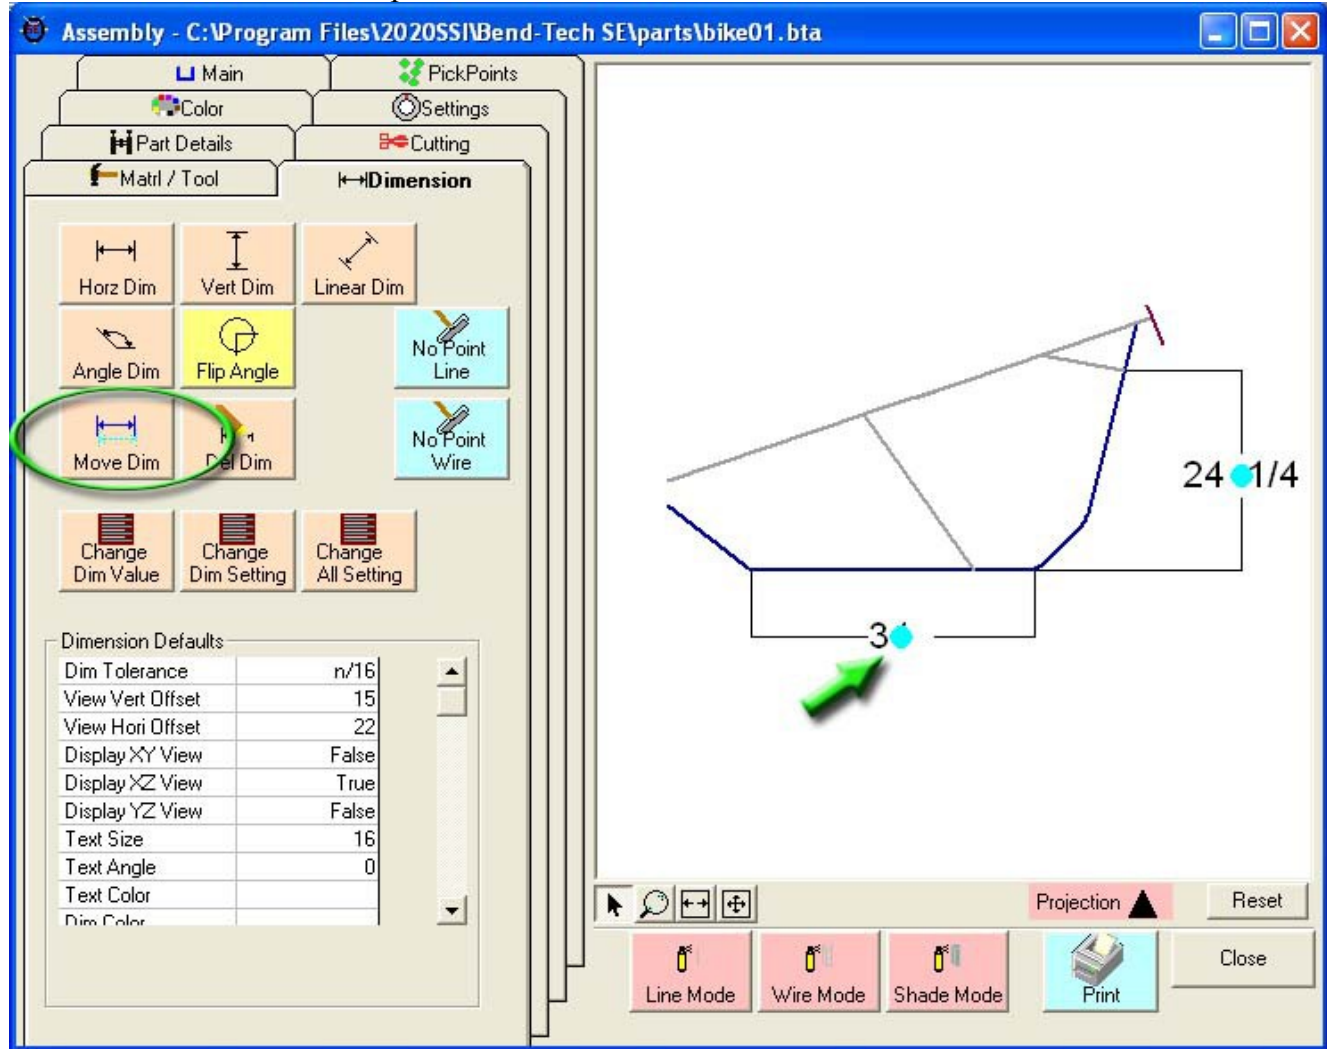

Select the **new location with the cursor** where you would like the text. **NOTE: This is a screen pick, DO NOT select a PickPoint to drop the text down.**

