

## Removing or deleting a dimension.

Removing or deleting a dimension.

Select the "**Del Dim**" command button.

Select the "**PickPoint**" that represents the text of the dimension to remove.

