

When I try to remove the projection the software exits.

This is a common error on the users part.

The "**Close**" command button below the "**Projection**" command button is too exit the assembly.

If you desire to remove the projection window, select the "**Projection**" command button a 2nd time.

