



Single Bend CLR Change

Bend-tech 4.0 allows you to change an individual bend's CLR (in SE version only). In this example, we will use a hoop with two 90 degree bends. We will change our default tooling to 1.0 so our change will be more drastic and therefor easier to see.


Here's what our initial part looks like:

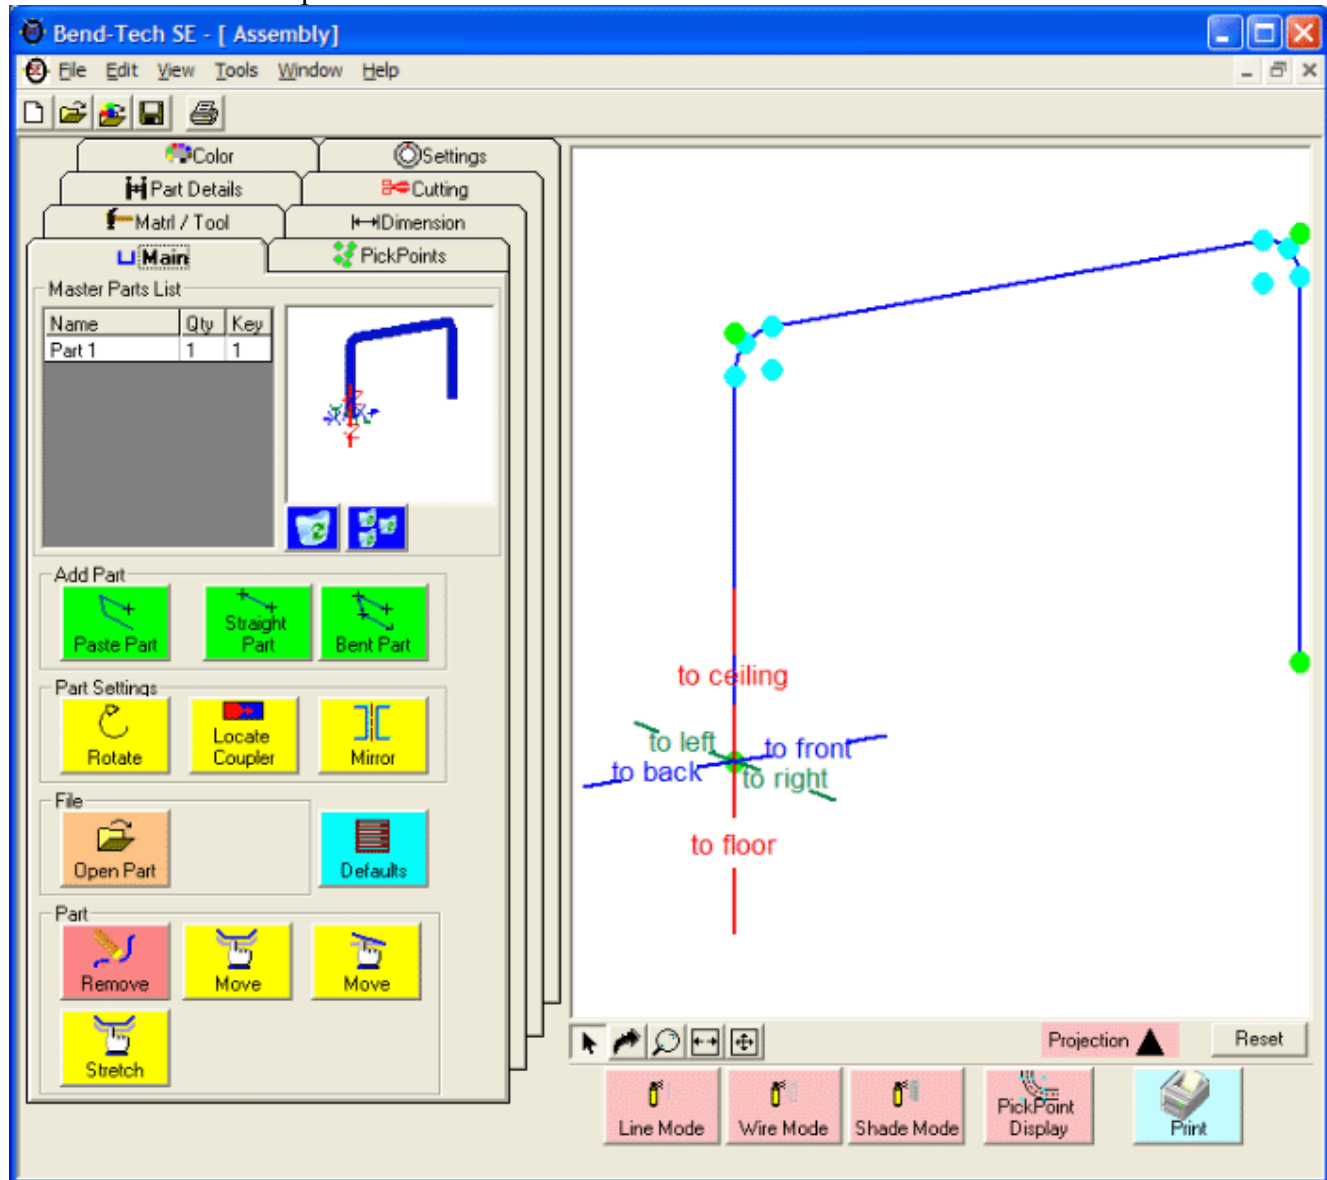

1) Click on the "Matl/Tool" tab and select "6.0" from the "Tool of Bend Change" drop-down box.

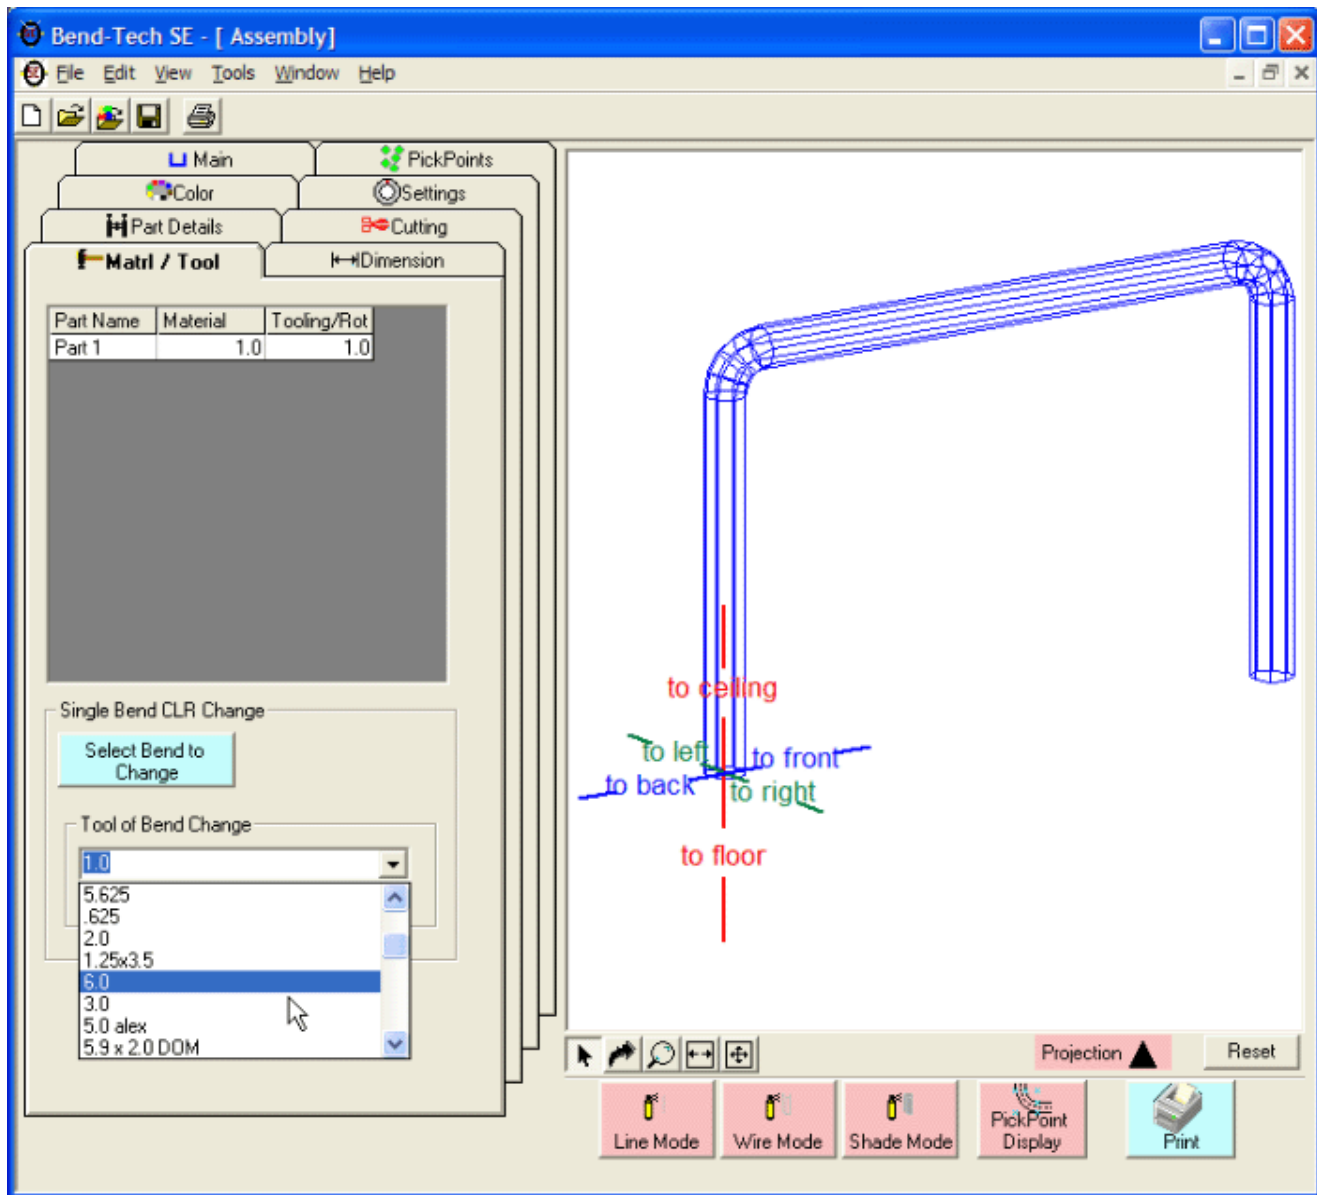

2) Then click on the "Select Bend to Change" button and the image will change as seen here:

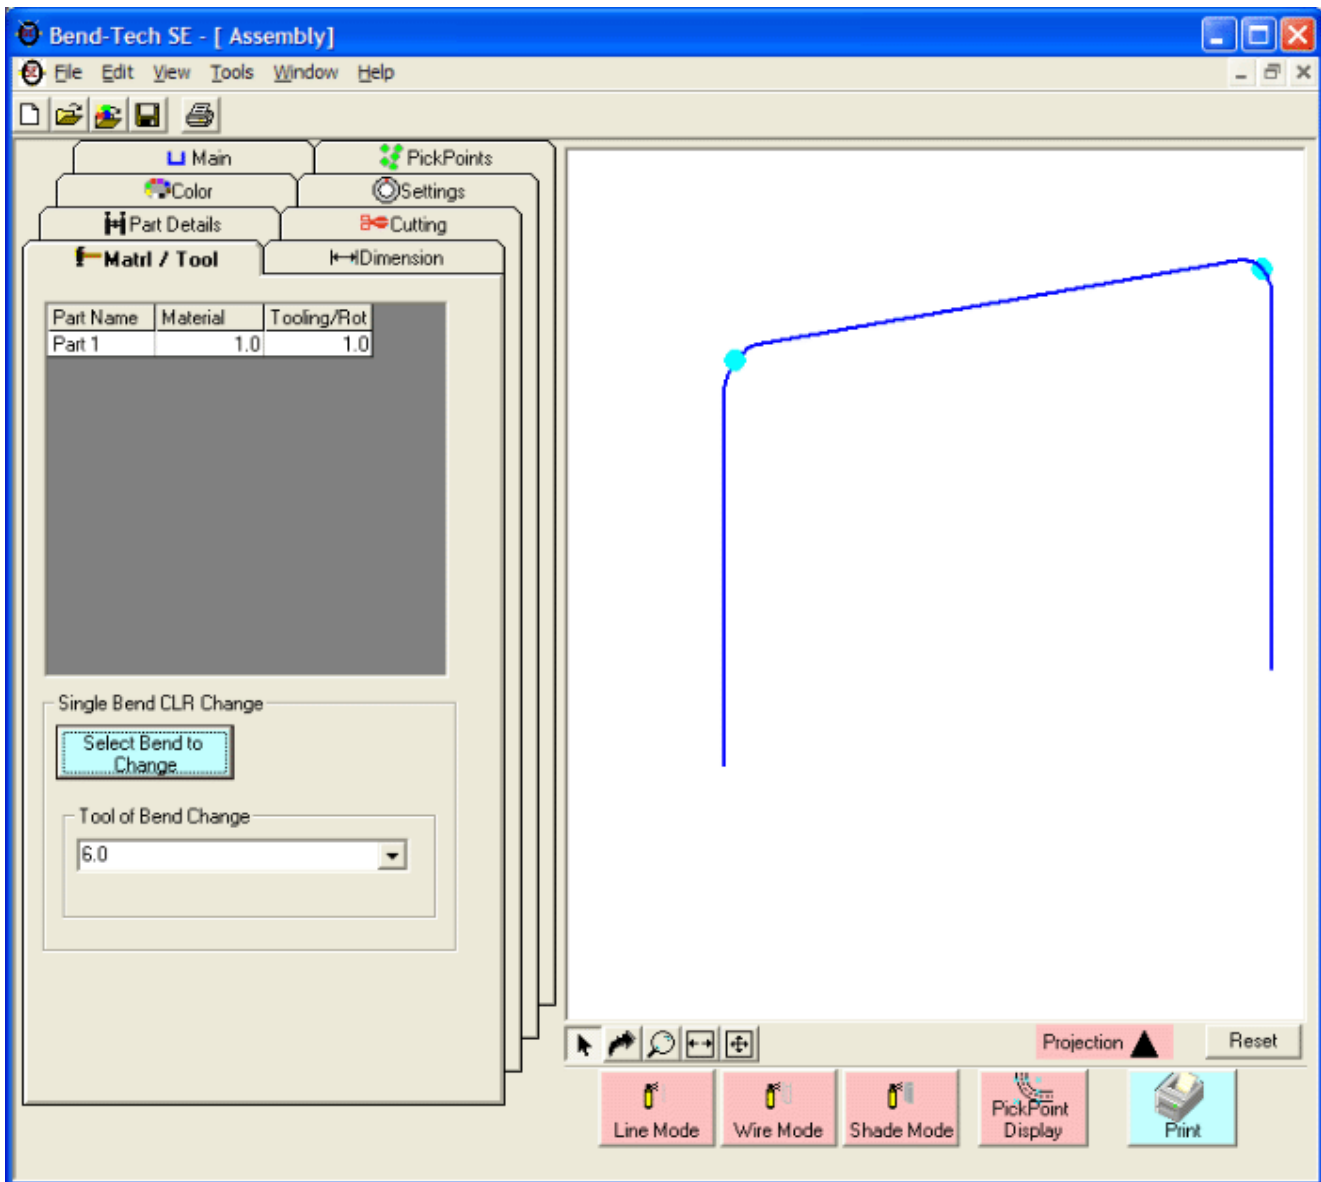

3) Now click on a bend, it will change that individual bend CLR to 6.0, and update the drawing.

