


Changing a "Master" Part Name

This section will show how to change the name of a "Master" part. This will not affect parts that are currently in the assembly.

Step 1: **Double click** the part name in the "**Master Part List**":

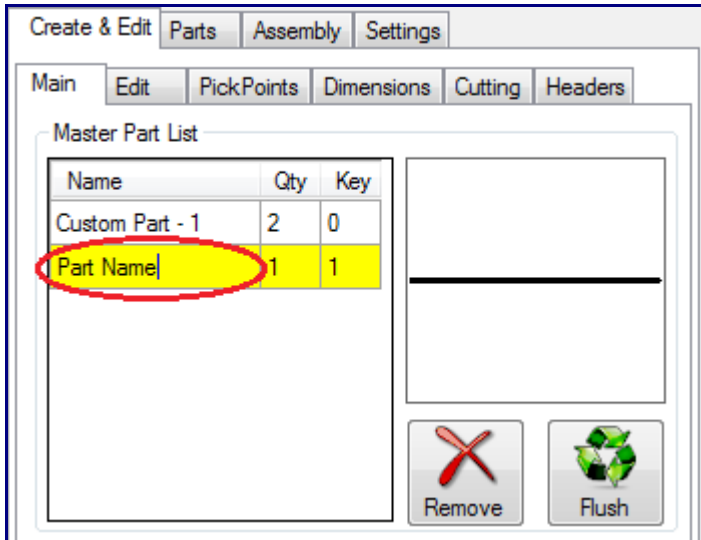

Step 2: Type in the new name:

