


# Changing a "Part" Name

This section will show how to change the name of a part that is in the assembly.

Step 1) Select the "Parts" tab

Step 2) Select the part from the list

Step 3) Key in the new part name

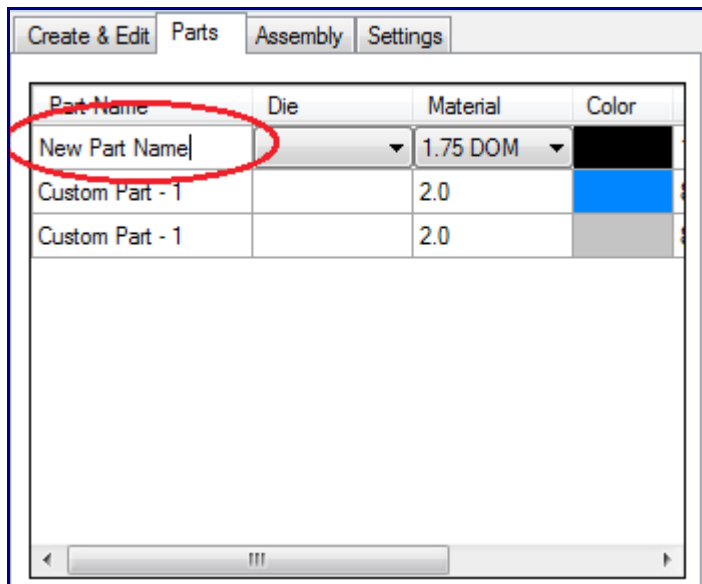

The screenshot shows a software window with four tabs: 'Create & Edit', 'Parts', 'Assembly', and 'Settings'. The 'Parts' tab is active. Below the tabs is a table with four columns: 'Part Name', 'Die', 'Material', and 'Color'. The first row of the table is highlighted with a red circle. The text 'New Part Name' is entered in the 'Part Name' column of this row. The 'Die' column has a dropdown arrow, and the 'Material' column shows '1.75 DOM' with a dropdown arrow. The 'Color' column is black. Below the first row, there are two more rows: 'Custom Part - 1' with a blue color, and another 'Custom Part - 1' with a grey color. The table is part of a larger window with a scroll bar at the bottom.

Part Name	Die	Material	Color
New Part Name		1.75 DOM	
Custom Part - 1		2.0	
Custom Part - 1		2.0	