


Changing the Current Material & Die

This Section is to show how to change the tooling and material for parts that are going to be created in the assembly. A different thread covers "changing" the material or tooling.

Select the "Main" tab. At the bottom of this tab, the die and material menus are shown. Click the drop down arrow for either of these options to change the selections.

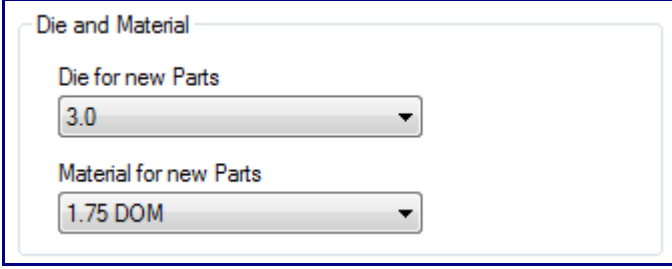

The image shows a software window titled "Die and Material". Inside the window, there are two dropdown menus. The first is labeled "Die for new Parts" and has "3.0" selected. The second is labeled "Material for new Parts" and has "1.75 DOM" selected. Both dropdown menus have a small downward-pointing arrow on the right side.

NOTE: If your default material and/or tooling has been set in the "Options" window (under the "tools" pull-down), assembly will start by using those values.