


Deleting or Removing a Part

This section will show how to remove or delete a part in the assembly.
There are 2 different types of removing or deleting:


First Type

Removing a Part from our Assembly


Select the "Remove" command button:

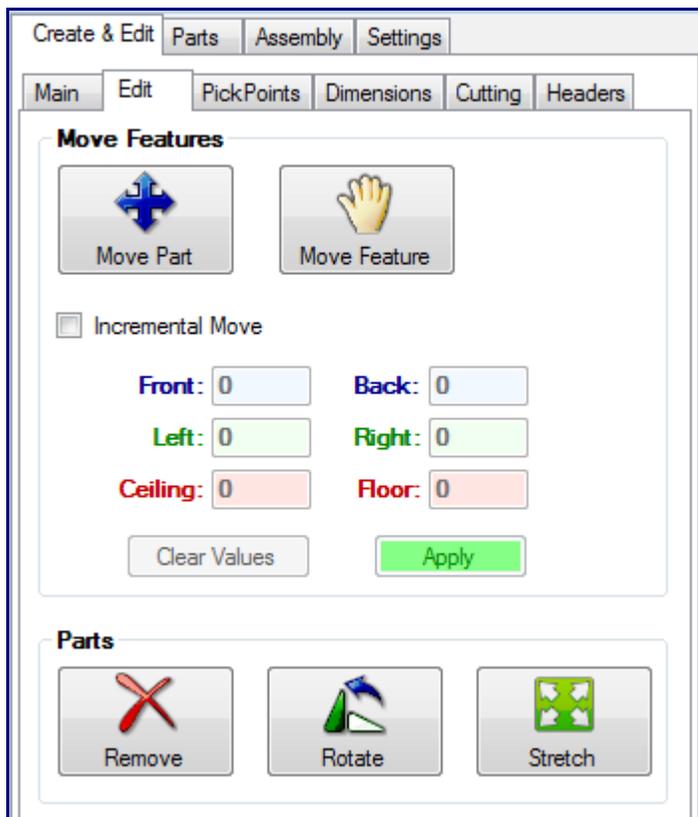

Select a PickPoint(s) on the part(s) you wish to remove:

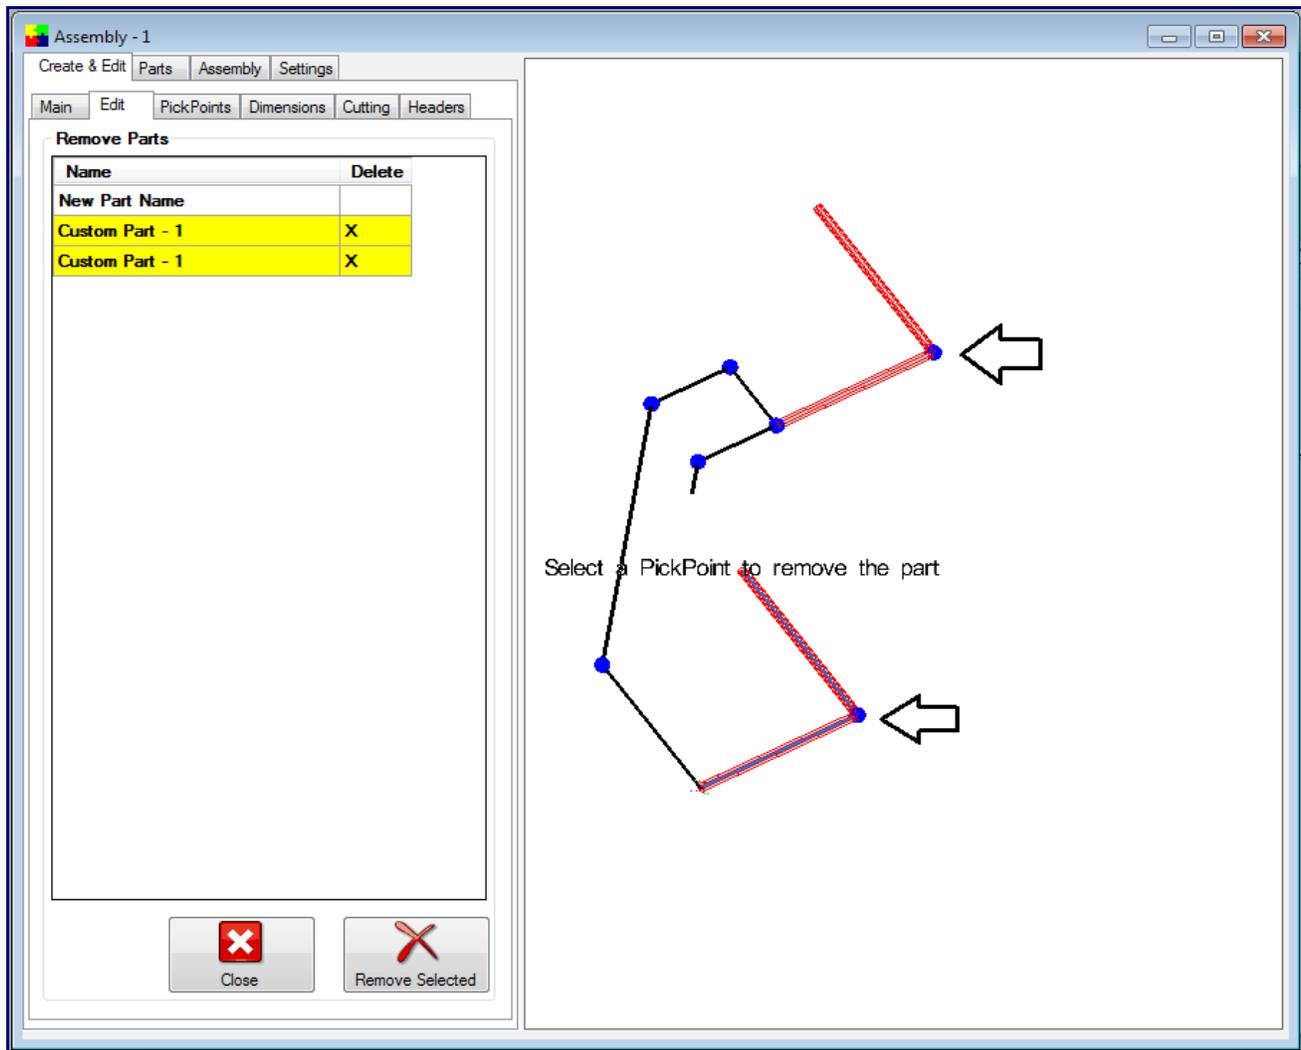


Click the "**Remove Selected**" button to remove the part(s).

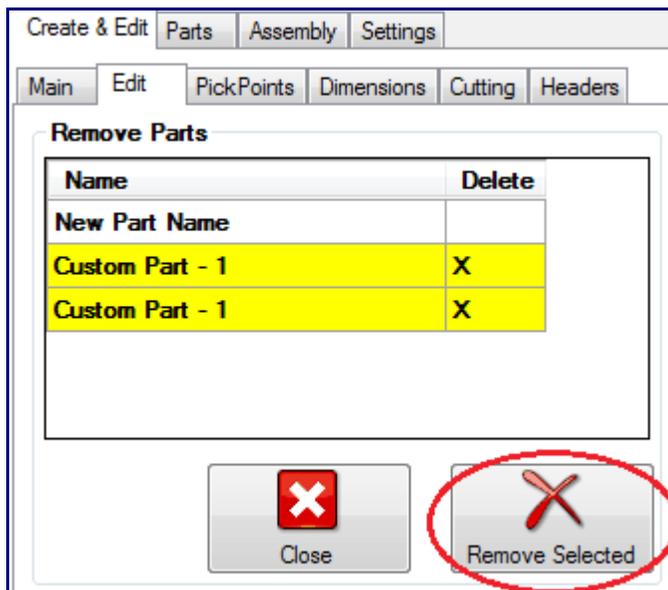

Second Type

Remove a Part from the Master Part List

When you remove part from the assembly a "master" part will still be available for later use. If you desire to remove the part from the "master" list, select the part in the list as shown below and select the "Remove" button.

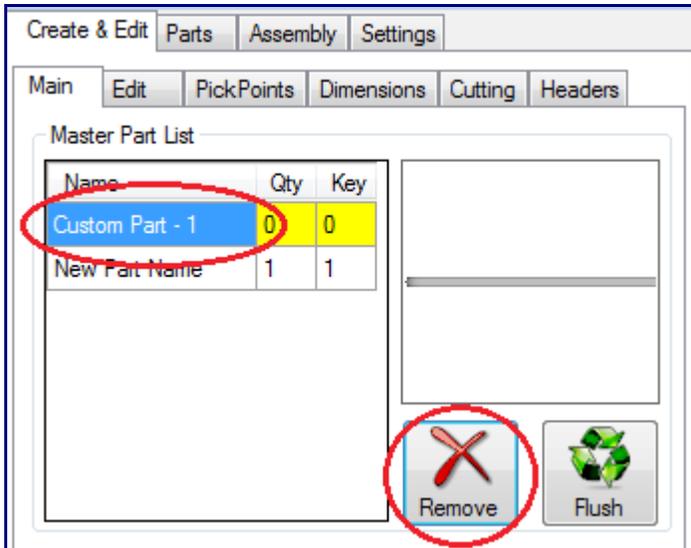

You can also select the "Flush" button to remove all of the parts from the master list with a quantity of 0 (not in your assembly drawing).

