

# Removing or Deleting a Dimension

Select the "**Delete**" command button.

Select the "**PickPoint**" that represents the text of the dimension to remove.

