


## Printing

---


This entire thread will cover concepts and issues about printing with in Bend-Tech. Please view all of the posts.

### How do I not print the transitional setup sheet from Bend-Tech EZ-3D, PRO and SE?

UnCheck the "**Print Transitions**" checkbox.

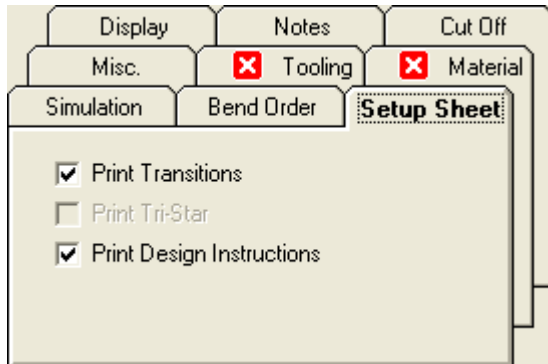

For global setting do the same in the "**Options**" window under the "**Tools**" pull-down.

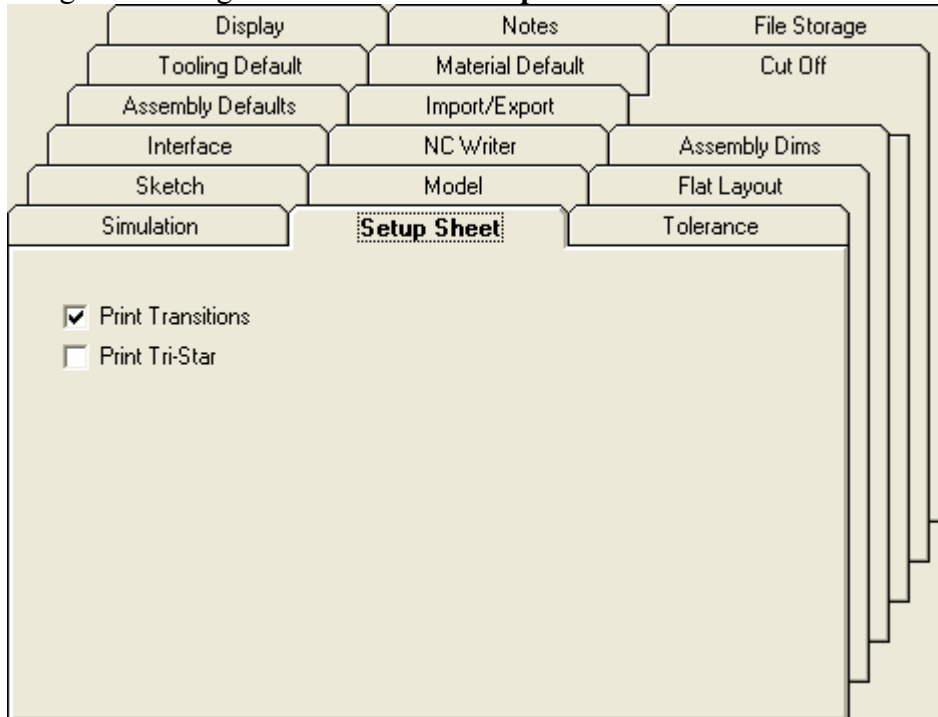

Reminder: Select the "**Apply**" and then the "**OK**" buttons when the "**Options**" changes are completed.


### Printer only prints when I exit Bend-Tech

---


This is caused from the software seeing something with your environment it doesn't like. Here are some

things to check for.


1) **Make sure the "Print Design Instructions" is checked under the "Setup Sheet" tab.**

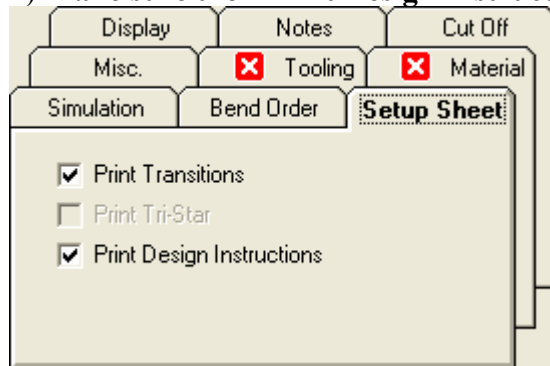

2) **Check the Tooling and Material tabs and verify both are set correctly.**

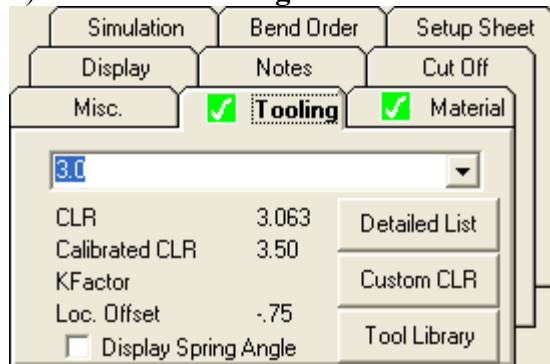

3) **Flip needs to have a value ("None" is an OK value).**

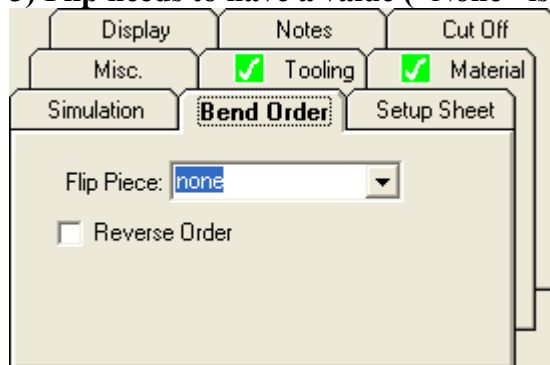

4) **In "Custom Part" and "Custom 3D Part", EVERY feature INCLUDING the FIRST FEATURE must have a directional value. At times Customers will think the "1" in either interface is the start location of the tube, when it is the distance to the first bend apex.....**

Custom 3D

Number of Bends: 2 Detailed List

Tooling: 3.0 Custom CLR

Dimension Type: Apex

Bend

1  
2  
E

0

to ceiling

to left to front

to back to right

to floor

0 12 0 0